

Partytime Machines

Margaritas, Smoothies, & Frozen Drinks

(408) 379-1451 * 1794 Angela St. San Jose, CA 95125 * Partytimemachines.com



GOLD MEDAL®

PRETZEL WARMER #5550



1. Place the machine on a level surface.
2. Plug the machine into a standard 110-volt outlet.
3. This unit contains a pan under the rotisserie. Fill the pan with warm water. This water is used to generate steam.
4. Turn the **HEAT** switch on by pushing it down toward the green light.
5. Turn the **TEMP CONTROL** knob to “High” and let the unit preheat for approximately one hour.
6. After an hour of preheating, turn the **TEMP CONTROL** knob to 170 DEG. F to maintain 150 DEG. F product temperature.
7. Place the product inside the cabinet by dangling on the rotisserie’s arms.
8. Turn on the **LIGHT** switch for display light, and rotisserie rotation.

⚠ NOTE: THE ROTISSERIE WILL ONLY FUNCTION WITH THE DOOR CLOSED.

9. After use, turn off all switches, and unplug machine. Allow machine 45 minutes to cool.
10. Empty the water in the pan in a disposable place, such as a sink or tub.
11. With a damp cloth wipe down the machine’s exterior, and inside the cabinet. Use a window cleaner to return the cabinet’s glass to a sparkling shine.



⚠ WARNING! NEVER USE ABRASIVES WHEN CLEANING THE STAINLESS STEEL BODY!