

Partytime Machines  
Margaritas, Smoothies, & Frozen Drinks  
(408) 379-1451 \* 1794 Angela St. San Jose, CA 95125 \* Partytimemachines.com

**GOLD MEDAL**

**SNO-KONE  
SNO-KING #1888**



**NOTE: YOU MUST PURCHASE YOUR OWN ICE FOR THIS MACHINE.**

1. Place the machine on a level surface.
2. Plug the machine into a standard 110-volt outlet.
3. Open your bottle(s) of *Gold Star* flavoring, and screw in the dispenser pump(s).
4. Remove any objects from inside the machine, such as cups or ladles.
5. Turn the **POWER** switch "On."

**WARNING: NEVER PUT YOUR HAND DOWN THE GOOSENECK OR UNDERNEATH THE BLADES! BLADES ARE SHARP AND WILL CUT YOU!!!**

6. Even though the machine is now on, it will not run the blades that shave the ice until you press the **MOTOR** button.
7. Fill the **GOOSENECK** with ice cubes and push down on the **HOPPER ARM** to force the ice into the blades. The shaved ice will fall into the box below.
8. Use a ladle to scoop the ice out of the box and into a SnoKone cup.
9. Give 1 or 2 squirts of *Gold Star* flavoring from the dispenser pump, and serve!



### **CLEANING YOUR MACHINE**

10. Turn the **POWER** off, and unplug the machine.
11. Scoop out excess ice, and drain any water in the box by tilting the machine toward the drain valve.
11. Wipe down the machine with a cloth, using a glass cleaner on the sides.

**WARNING: NEVER CLEAN THE INSIDE OF THE GOOSENECK OR THE BLADES! WE HAVE PROFESSIONAL CLEANERS WHO ARE RESPONSIBLE FOR DEALING WITH THOSE COMPONENTS.**